

Descapacitor manual, cu aburi



Safety Instructions

1. Read the user manual before use and follow the instructions below. Producer cannot be held responsible for any damages caused by improper use.
2. This device is not designed to be used by persons (including children) with limited physical, sensual or psychological abilities or by persons who do not have experience or knowledge of the device unless it is done under supervision and according to the user manual passed by persons responsible for their safety.
3. Use only grounded source of electricity to supply this device.
 - a) Electric installation needs to be equipped with residual current device and is designed to trip on a leakage current of 30 mA. Overcurrent protection needs to be checked periodically.
 - b) It is not allowed to carry out any maintenance works if any covers or parts are removed from the device
 - c) All casings need to be firmly attached to the device during work.
 - d) Pay special attention during uncapping process
4. Do not leave the device unattended while working
5. Do not move the device during uncapping process
6. Do not top-up water for steam generator during uncapping process – unplug the device and wait at least 2 minutes before topping the device up.
7. Do not turn the device on if the power cord is damaged
8. Take extra care whilst plugging a power cord. Hands have to be dry. Place on a dry surface
9. Do not pull power cord, keep the power cord away from heat sources, sharp edges and keep it in good condition.
10. Periodically check the power cord for damage. In case of any visible damage contact qualified personnel to replace it, and do not use the device until the power cord is fixed.

Cum se foloseste

1. Utilajul a fost conceput sa se potriveasca pe orice banc sau bazin pentru descapacit.
2. Dupa instalare, asigurati-va ca operatiunea este usoara si confortabila.
3. Inainte de a incepe lucrul, asigurati-va ca generatorul de aburi este umplut cu apa (nu depasiti indicatorul MAX), dupa care conectati-l la priza (230V). Nu porniti utilajul daca rezervorul de apa este gol.
4. Cutitele de descapacit sunt incalzite cu aburi. Incepeti descapacirea numai dupa ce cutitele ating temperatura de operare.
5. Suportul de asteptare este echipat cu o protectie a mainilor.
6. Plasati rama pe suportul de asteptare, acordand o atentie deosebita cutitelor. Daca unghiul de descapacire sau temperatura sunt incorecte:
 - a) reglati unghiul folosind o surubelnita (sub lama cutitului). Protejati-va mainile folosind manusi groase din bumbac.
 - b) Asteptati pana cutitele ajung la temperatura corespunzatoare.
7. Impingeti rama de-a lungul glisoarelor, pentru descapacire.



Marginile ascutite la dispozitiv. Tineti copiii departe. Acordati atentie sporita cutitelor. Sunt foarte ascutite si fierbinti.

Utilajul este confectionat din INOX alimentar, rezistent la acizi. Este disponibil pe doua dimensiuni: 1000mm si 1500mm.



Suruburile de reglare a unghiului cutitelor.

Mentenananta

1. Deconectati utilajul de la sursa de alimentare inainte de a incepe orice actiune de intretinere.
2. Inainte de utilizare, utilajul trebuie curatat cu atentie, cu apa calda si o cantitate mica de detergenti utilizati in industria alimentara.
3. Uscati bine dispozitivul dupa spalare.