


Model : CF 9545-H (3')


# Assembly Instruction

A		Headboard	1pc
B		Footboard	1pc
C		Side Rail	4pcs
D		Side Wing	2pcs
E		Footboard Legs Plastic Cone Leg NO.99 - (60x150H)	2pcs
F		Side Rail Legs NO.127 - 30 x 80 x 240mm	2pcs
G		14 Stat 897mm	2pcs
H		Spring Washers	10pcs
I		Flat Washers	18pcs
J		JCBB M8 x 20	4pcs
K		JCBC M6 x 30	8pcs
L		JCBC M6 x 50	10pcs
M		CSK Screw 32mm	28pcs
N		Allen Key 65mm	1pc
O		Allen Key 70mm	1pc


Step 1 : Fix the footboard (B) with legs (E) as shown.

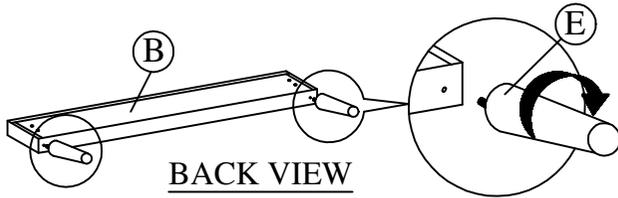


Step 2 : Attach the side wing (D) to the headboard (A).

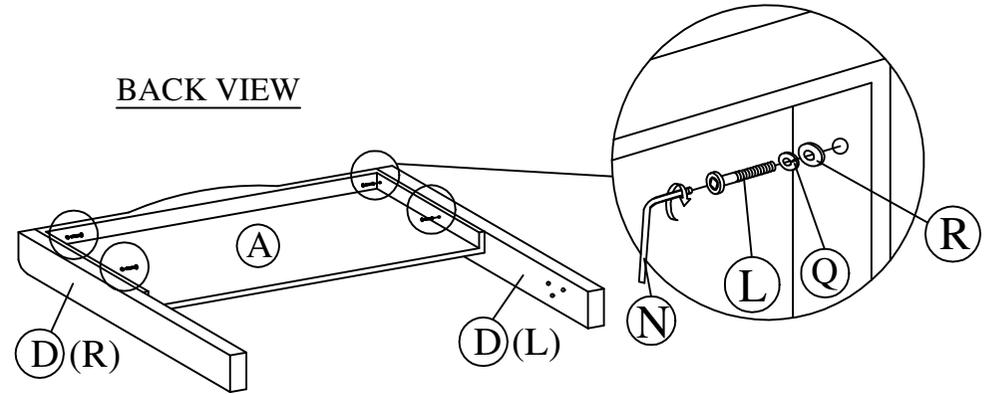


Step 3 : Attach the JCBB Bolt (J) to the footboard bracket.

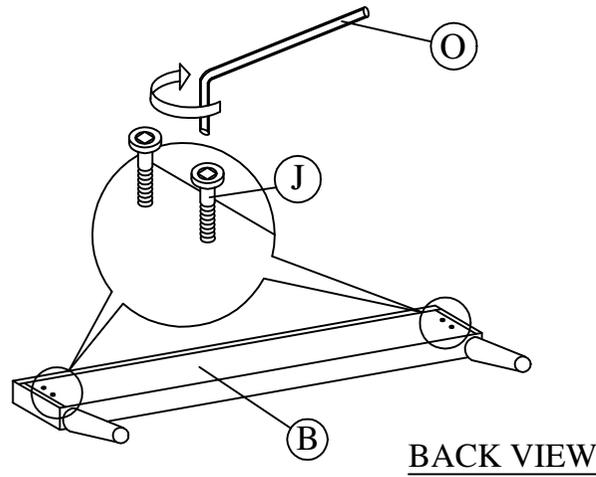

Step 4 : Attach the side rail leg (F) to the side rail (C).

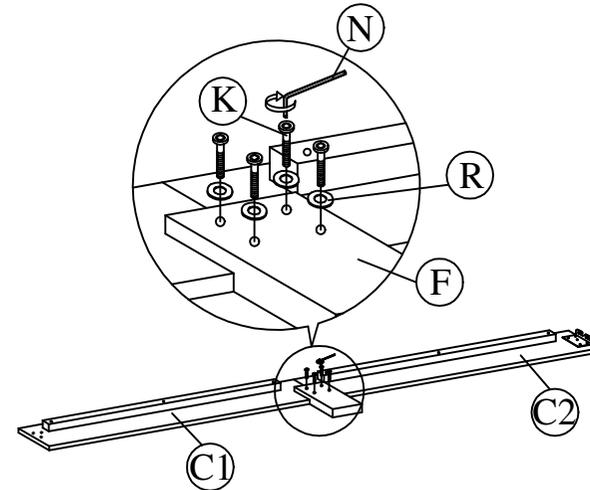

Step 5 : Attach side wing (D) to side rail (C). Attach side rail (C) to footboard (B) by pushing the bracket down to fit it.

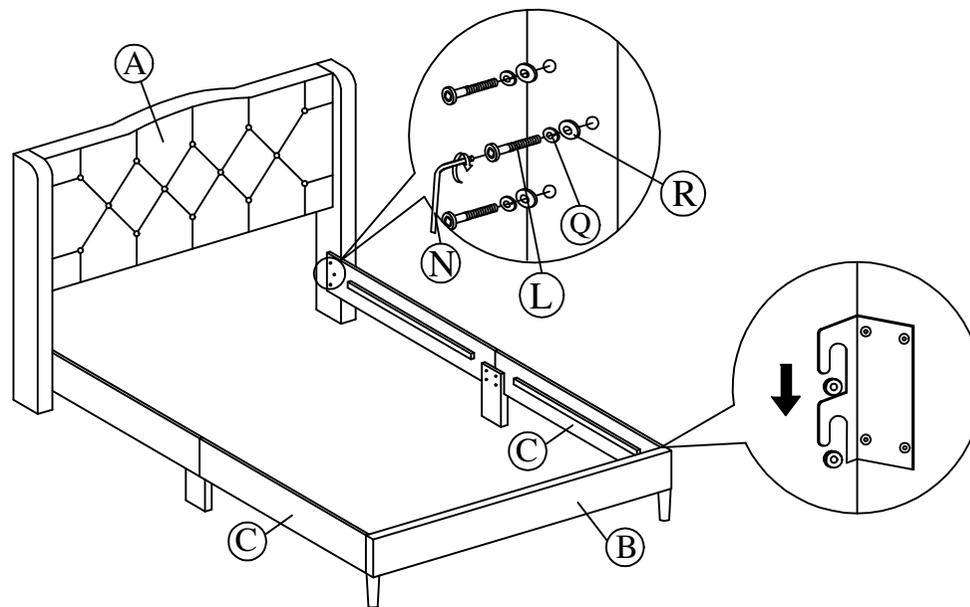

Step 6 : Tighten the 4 Corner with Allen Key (O). Install the bed slats (G) to side rail. Tighten the slats with CSK screw (P). The distance of the slats should be sufficient to obtain desirable bed stability.

