

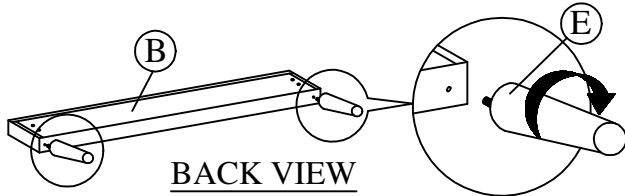
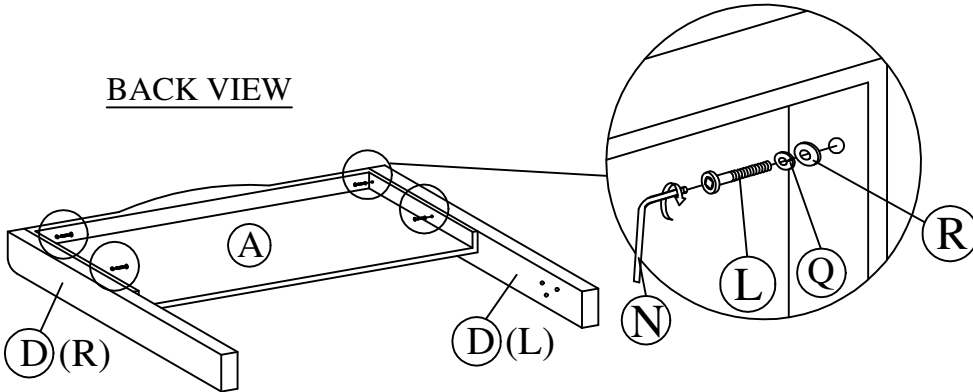
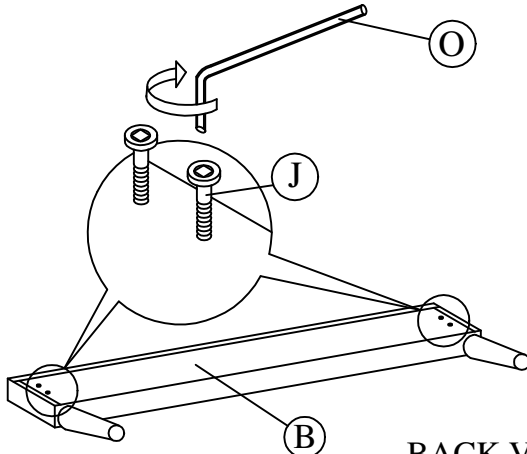
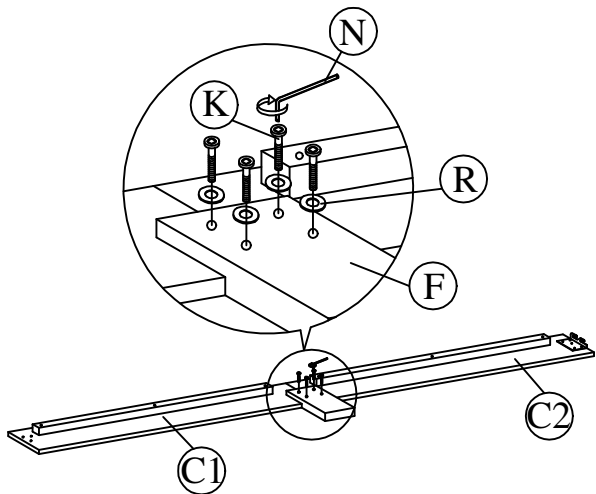


Model : CF 9545-H (4'6")				Assembly Instruction	
A		Headboard	1pc	Step 1 : Fix the footboard (B) with legs (E) as shown.  <u>BACK VIEW</u>	Step 2 : Attach the side wing (D) to the headboard (A).  <u>BACK VIEW</u>
B		Footboard	1pc		
C		Side Rail	4pcs		
D		Side Wing	2pcs		
E		Footboard Legs Plastic Cone Leg NO.99 - (60x150H)	2pcs		
F		Side Rail Legs NO.127 - 30 x 80 x 240mm	2pcs		
G		Center Rail 870mm	2pcs		
H		14 Slat 1397mm	2pcs		
I		Support Legs 215mm	4pcs		
J		JCBB M8 x 20	4pcs		
K		JCBC M6 x 30	8pcs		
L		JCBC M6 x 50	10pcs	Step 3 : Attach the JCBB Bolt (J) to the footboard bracket.  <u>BACK VIEW</u>	Step 4 : Attach the side rail leg (F) to the side rail (C). 
M		JCBC M6 x 60	4pcs		
N		Allen Key 65mm	1pc		
O		Allen Key 70mm	1pc		
P		CSK Screw 32mm	28pcs		
Q		Spring Washers	10pcs		
R		Flat Washers	18pcs		
S		Small Adjuster	4pcs		

Step 5 : Attach side wing (D) to side rail (C). Attach side rail (C) to footboard (B) by pushing the bracket down to fit it.

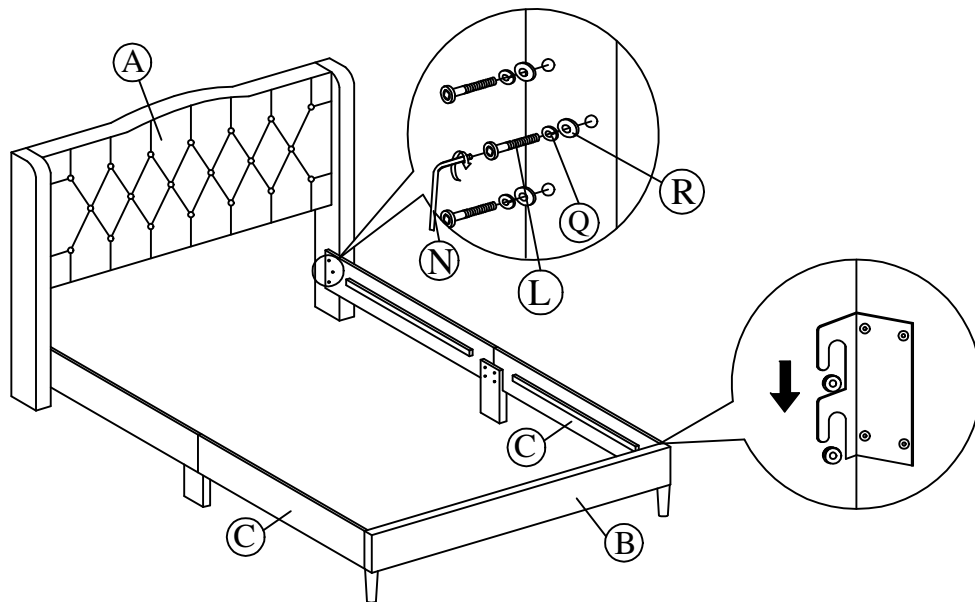

Step 6 : Attach the support legs (I) to the slats (H).

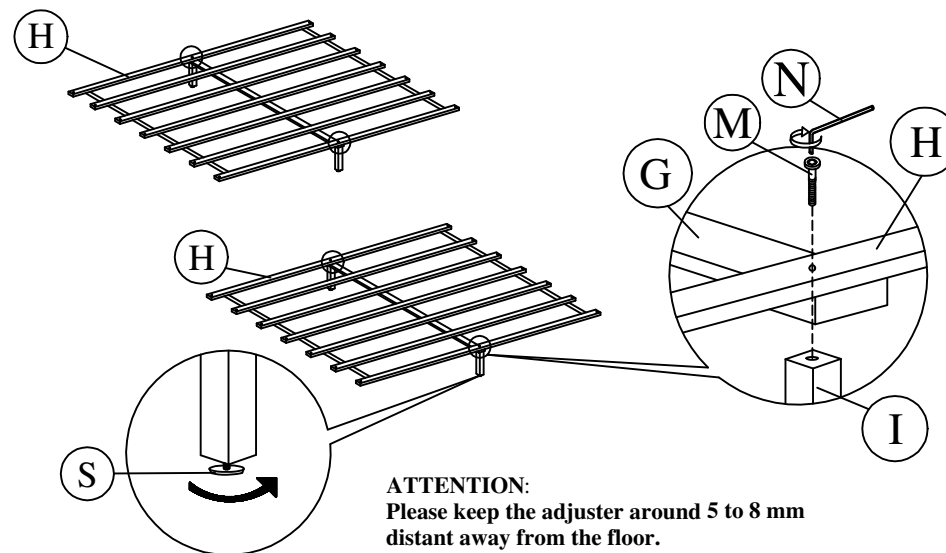

Step 7 : Tighten the 4 Corner with Allen Key (O). Install the bed slats to side rail. Tighten the slats with CSK screw (P). The distance of the slats should be sufficient to obtain desirable bed stability.

