
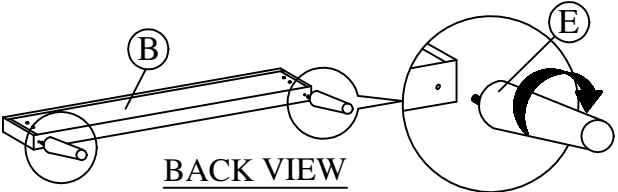
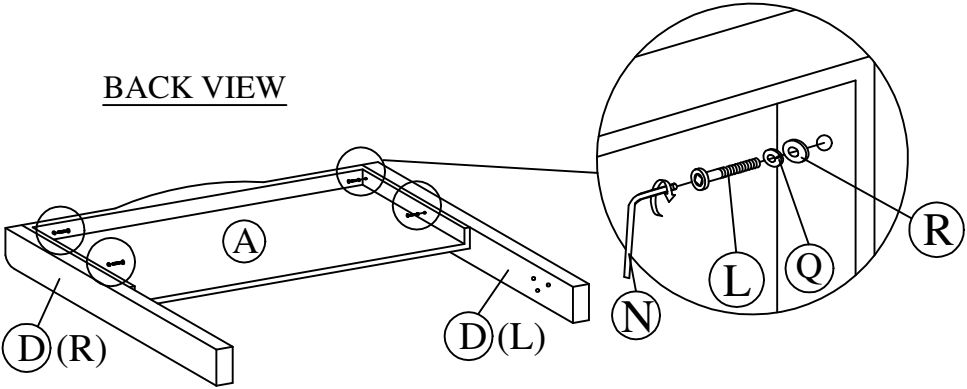




















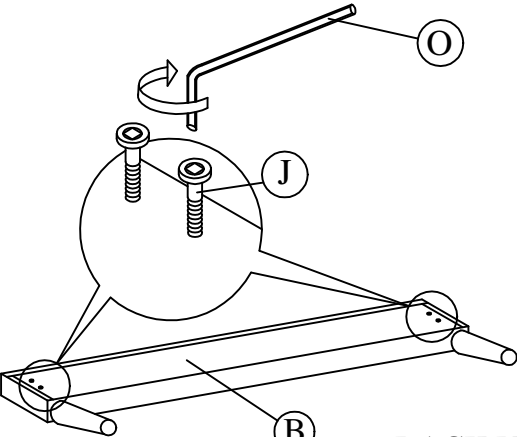
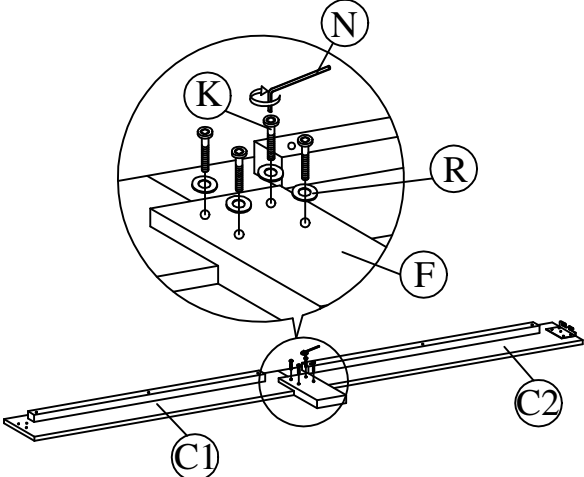


Model : CF 9545-H (5'6")			Assembly Instruction	
A		Headboard 1pc	<p>Step 1 : Fix the footboard (B) with legs (E) as shown.</p>  <p><u>BACK VIEW</u></p>	<p>Step 2 : Attach the side wing (D) to the headboard (A).</p>  <p><u>BACK VIEW</u></p>
B		Footboard 1pc		
C		Side Rail 4pcs		
D		Side Wing 2pcs		
E		Footboard Legs Plastic Cone Leg NO.99 - (60x150H) 2pcs		
F		Side Rail Legs NO.127 - 30 x 80 x 240mm 2pcs		
G		Center Rail 870mm 2pcs		
H		14 Slat 1597mm 2pcs		
I		Support Legs 215mm 4pcs		
J		JCBB M8 x 20 4pcs		
K		JCBC M6 x 30 8pcs	<p>Step 3 : Attach the JCBB Bolt (J) to the footboard bracket.</p>  <p><u>BACK VIEW</u></p>	<p>Step 4 : Attach the side rail leg (F) to the side rail (C).</p> 
L		JCBC M6 x 50 10pcs		
M		JCBC M6 x 60 4pcs		
N		Allen Key 65mm 1pc		
O		Allen Key 70mm 1pc		
P		CSK Screw 32mm 28pcs		
Q		Spring Washers 10pcs		
R		Flat Washers 18pcs		
S		Small Adjuster 4pcs		

Step 5 : Attach side wing (D) to side rail (C). Attach side rail (C) to footboard (B) by pushing the bracket down to fit it.



Step 6 : Attach the support legs (I) to the slats (H).

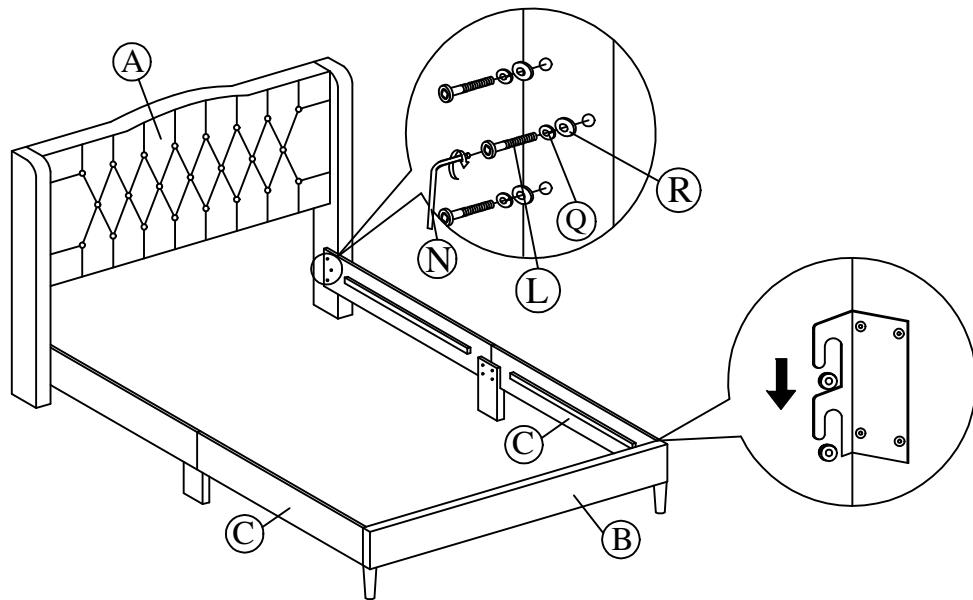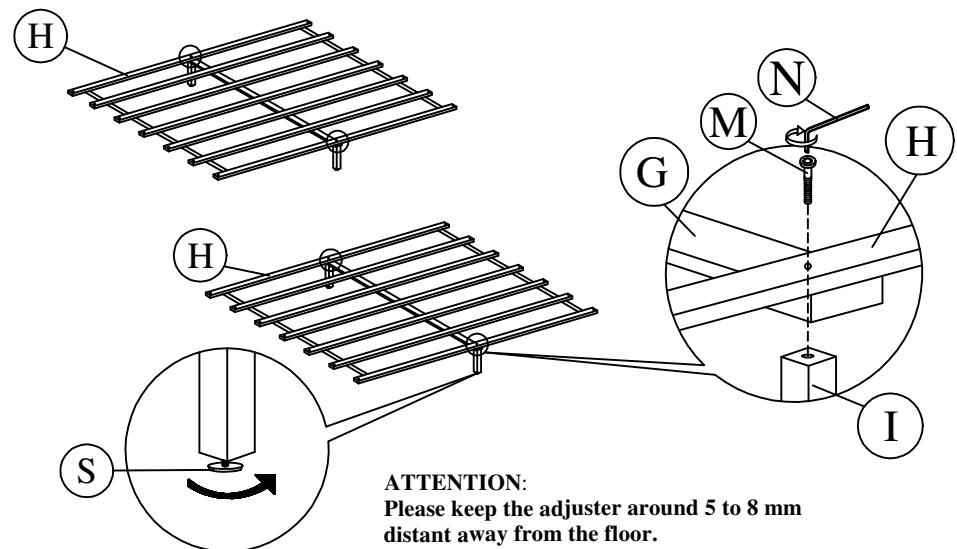

Step 7 : Tighten the 4 Corner with Allen Key (O). Install the bed slats to side rail. Tighten the slats with CSK screw (P). The distance of the slats should be sufficient to obtain desirable bed stability.

